



Grandstream Networks, Inc.

GDS Manager

User Manual



Table of Contents

DOCUMENT PURPOSE	6
CHANGE LOG	7
Software Version 1.0.0.109	7
Software Version 1.0.0.98	7
Software Version 1.0.0.75	7
WELCOME.....	8
GETTING TO KNOW GDS MANAGER	9
Installation Guide	9
<i>Minimum Computer System Requirement.....</i>	9
<i>Download and Install GDS Manager</i>	9
Connecting to the GDS Manager	10
<i>Starting GDS Server</i>	10
<i>Starting GDS Manager.....</i>	11
GDS MANAGER APPLICATIONS.....	13
Basic Information	13
<i>Administrator.....</i>	13
<i>Group</i>	14
<i>Member.....</i>	15
<i>Schedule</i>	19
<i>Holiday</i>	20
Device	20
<i>Search.....</i>	20
<i>Configuration.....</i>	21
<i>Card Info</i>	22
Log	23
<i>Device Log</i>	23
<i>Administrator Log.....</i>	25
Realtime Video.....	26
<i>Preview Configure.....</i>	28
<i>GDS</i>	29
Report.....	30
<i>SMTP Server Information</i>	30



Report List..... 31

Attendance Management..... 31

Time Frame..... 32

Work Shift..... 33

Work Shift Assignment..... 33

Special Assignment..... 34

Vacation Catalog..... 35

Vacation Apply 36

Overtime..... 37

Clock in/out Records..... 37

Makeup Check-In..... 38

Attendance Report..... 39

EXPERIENCING THE GDS MANAGER41



Table of Figures

Figure 1: GDS Server Options.....	10
Figure 2: Server Configuration.....	10
Figure 3: GDS Manager Login Page	11
Figure 4: Monitor Configuration	12
Figure 5: Administrator.....	13
Figure 6: User Management.....	13
Figure 7: User Level Access	14
Figure 8: Groups	14
Figure 9: Add Groups.....	15
Figure 10: Group Name	15
Figure 11: Member.....	15
Figure 12: Member Profile	16
Figure 13: Batch Add Card	17
Figure 14: USB Card Reader.....	18
Figure 15: Batch Config.....	18
Figure 16: Export	19
Figure 17: Search Members	19
Figure 18: Schedule.....	20
Figure 19: Holiday.....	20
Figure 20: Search	21
Figure 21: Search Window	21
Figure 22: Configuration	21
Figure 23: Device Config	22
Figure 24: Card Info.....	22
Figure 25: Device Card Information.....	23
Figure 26: Device Log.....	23
Figure 27: Log Management Device	24
Figure 28: Administrator Log.....	25
Figure 29: Log Management Admin	26
Figure 30: Realtime Video	26
Figure 31: Play GDS3710 Stream	27
Figure 32: GDS3710 Live Stream	28
Figure 33: Preview Configure	29
Figure 34: Local Config.....	29



Figure 35: GDS	30
Figure 36: SMTP Configuration	30
Figure 37: Report List	31
Figure 38: Timeframe Property	32
Figure 39: Timeframe	33
Figure 40: Work Shift Index	33
Figure 41: Assign Shift to Member	34
Figure 42: Special Assignment	35
Figure 43: Vacation Type	35
Figure 44: Take Vacation	36
Figure 45: Overtime	37
Figure 46: Clock In / Out Records	37
Figure 47: Export Attendance	38
Figure 48: Makeup Record	38
Figure 49: Audit	39
Figure 50: Attendance Report	40

Table of Tables

Table 1: Member Profile	16
Table 2: Timeframe	32



DOCUMENT PURPOSE

This document describes the basic concept and tasks necessary to use and configure your GDS Manager. In addition, it covers the topic of connecting and configuring the GDS Manager with the GDS3710.

Please visit <http://www.grandstream.com/support> to download the latest “GDS Manager User Manual”.

This guide covers following topics:

- [Welcome](#)
- [Getting to Know GDS Manager](#)
- [GDS Manager Applications](#)
- [Experiencing the GDS Manager](#)



CHANGE LOG

This section documents significant changes from previous versions of user manual for GDS Manager. Only major new features or major document updates are listed here. Minor updates for corrections or editing are not documented here.

Software Version 1.0.0.109

- Added Private Door Password Configuration Field in Member Management. [Private Door Password]
- Increased the Log Operation Types [Device Log]
- Added sorting function based on time in administrator logs [Administrator Log]
- Added SIP mode to display the IP/Port for peering calls in the visiting logs and call logs. [Device Log]

Software Version 1.0.0.98

- Added schedule batch modification option. [Schedule]
- Added SMTP support to GDSManager. [SMTP Server Information]
- Added option to select windows numbers to display when started.
- Added “Delete All” option in device configuration page. [Configuration]
- Regulated the maximum number of group to 50. [Group]
- Added keypad input error alarm under device log. [Device Log]
- Added manually configured email reporting function. [Report List]
- Updated UI Resource.
- Added GSDServer should display first when program initialized or launched.
- Added Record Server allowing configuration of the storage paths. [Starting GDS Server]
- Added “check box” in front of the search list of the device. [Search]
- Added prompted message of “Open Door Successfully” in the preview screen when door opened. [Realtime Video]
- Added Open Door feature. [Realtime Video]

Software Version 1.0.0.75

- This is the initial version for the GDS Manager.



WELCOME

Thank you for purchasing Grandstream's GDS3710 Hemispheric HD IP Video Door System, an innovative IP based powerful video door system.

GDS3710 HD IP Video Door System is a hemispheric IP video door phone and a high-definition IP surveillance. GDS3710 is ideal for monitoring from wall to wall without blind spots. Powered by an advanced Image Sensor Processor (ISP) and state of the art image algorithms, it delivers exceptional performance in all lighting conditions. The GDS3710 IP video door system features industry-leading SIP/VoIP for 2-way audio and video streaming to smart phones and SIP phones. It contains integrated PoE, LEDs, HD loudspeaker, RFID card reader, motion detector, lighting control switch and more.

GDS3710 HD IP Video Door System can be managed by Grandstream's free window based management software: GDS Manager Software, a client/server based software, which provides RFID card management and basic reports for the door entrance.

Along with Grandstream videophone, mobile Apps, and Network Video Recorder (NVR), the GDS3710 provides a powerful recording and monitoring solution. It can be managed with GSURF Pro or any ONVIF-compliant video management system. It also offers a flexible HTTP API for easy integration with 3rd party applications and other surveillance systems.

GDS3710 is ideal for entry places required wide angle monitoring, such as banks, hotels, schools, office building, retail stores and small warehouses, also good for small to median sized enclosed environments.



GETTING TO KNOW GDS MANAGER

The GDS Manager is a management software for the GDS3710 based on a Server/Client architecture, providing RFID card management, basic reports for door entrance and attendance management.

The GDS Manager is a client–server model, which is a distributed application structure that partitions tasks or workloads between the providers of a resource or service, called **Server**, and service requesters, called **Client**.

Often clients and servers communicate over a computer network on separate hardware, but both client and server may reside in the same system. A server host runs one or more server programs that share their resources with clients. A client does not share any of its resources, but requests a server's content or service function.

Clients therefore initiate communication sessions with servers that await incoming requests. Examples of computer applications that use the client–server model are Email, network printing, and the World Wide Web.

Installation Guide

Minimum Computer System Requirement

Server:

- **Operating System:** Windows 2003/2008 Server; Windows XP SP2/SP3; Windows 7 32bit/64bit
- **Processor:** Intel® Core™ i3; 2.6GHz or above recommended
- **Memory Capacity (RAM):** 4GB or above
- **Hard Drive Capacity:** 320G (depending on video recording requirement)
- **Graphics Card Type:** Discrete Graphics Card (nVIDIA GEFORCE® GTX660 or above recommended)
- **Network Adapter:** 1000Mbps network adapter

Clients:

- **Operating System:** Windows XP SP2/SP3; Windows Vista; Windows 7 32bit/64bit; Windows 8
- **Processor:** Intel® Core 2 Duo™ or above
- **Memory Capacity (RAM):** 2GB or above
- **Hard Drive Capacity:** 120G (depending on recording requirement)
- **Graphics Card Type:** Discrete Graphics Card recommended
- **Network Adapter:** 100Mbps network adapter, 1000Mbps recommended

Note: UPS is required for SERVER to prevent database or video record file corruption caused by power outage.

Download and Install GDS Manager

Users need to download the GDS Manager from the following link:

<http://www.grandstream.com/sites/default/files/Resources/gdsmanager.zip>





1. Click on  to start installing the GDS Manager.
2. Follow instructions to complete the installation.
3. After installation is successful, the following icons will be shown on the Desktop:



Connecting to the GDS Manager

Starting GDS Server

Double click on the GDS Server icon to start listening for new client connections. The following icon will be shown on the taskbar , right click on to bring the server options as shown below.

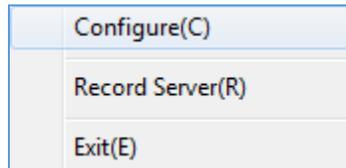


Figure 1: GDS Server Options

1. **Configure:** Click to display a window showing Listening IP and Port of the server as well as an option to start the server with the operating system and a button for starting the record server as shown below:

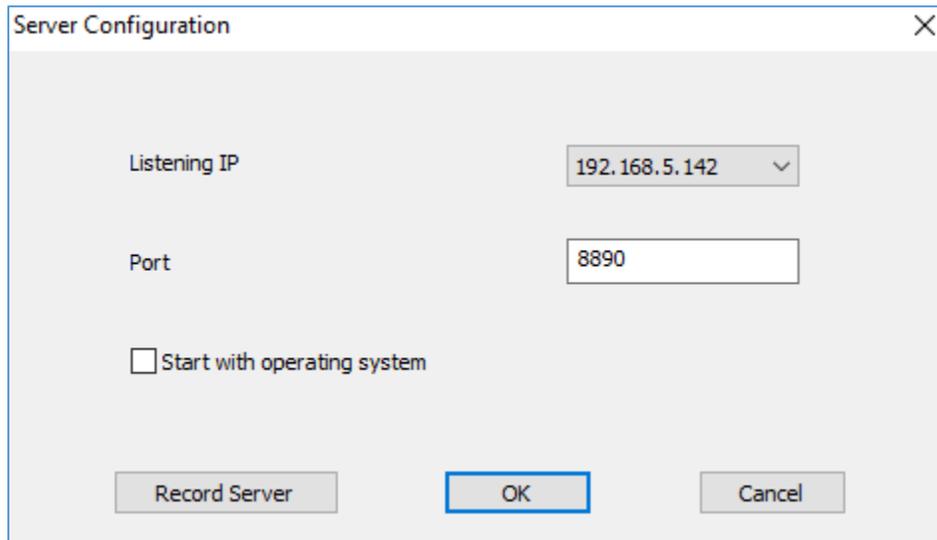


Figure 2: Server Configuration

2. **Record Server:** Start an FTP server to save pictures uploaded by the GDS3710.
3. **Exit:** Click to quit the GDS Server software.



Starting GDS Manager

The GDS Manager is the client part of the software, which will allow interaction with the GDS3710 through the GDS Server.

To start the GDS Manager follow steps below:

1. Double click on the GDS Manager and the following window will popup:

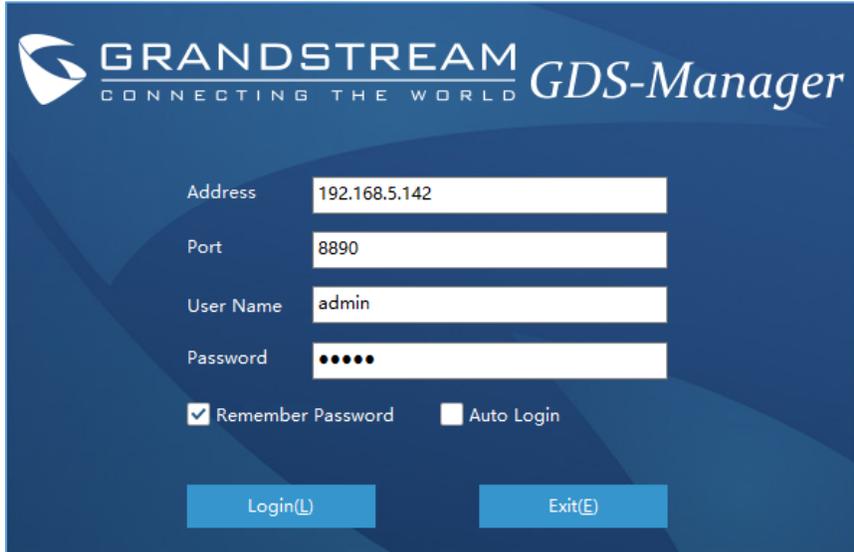


Figure 3: GDS Manager Login Page

- **Address:** Enter the IP address or domain of the GDS Server machine.
- **Port:** Enter the listening port of the GDS Server.
- **User Name:** Enter the user name to connect to the GDS Manager, by default its **admin**.
- **Password:** Enter the password to connect to the GDS Manager, by default its **admin**.

2. Click Login and the following confirmation window will popup:



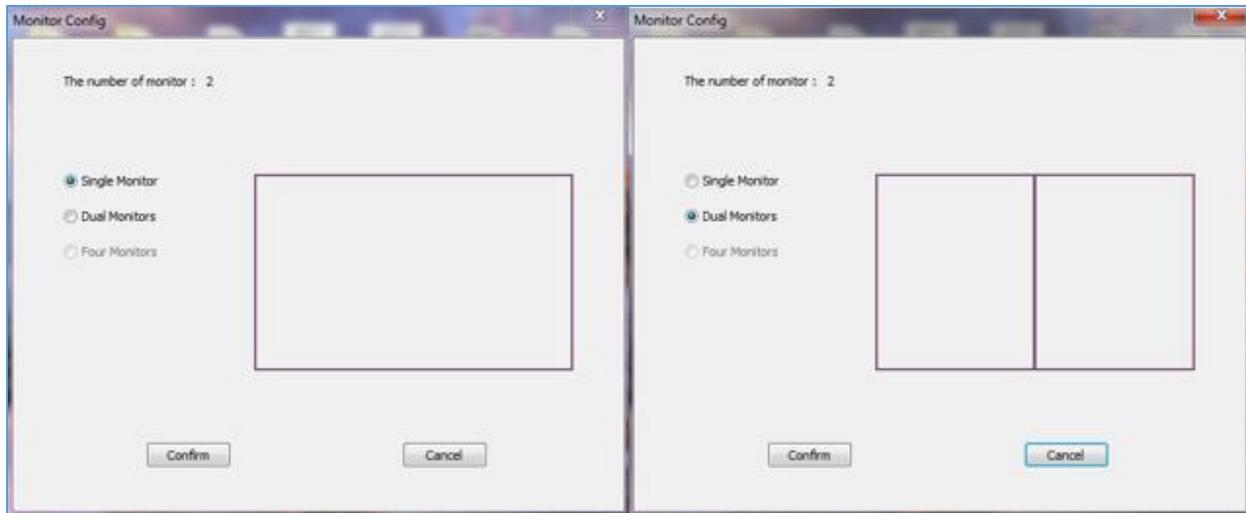


Figure 4: Monitor Configuration

- Select **Single Monitor** or **Dual Monitor** to display the GDS Manager on single screen or two screens respectively.
- Click Confirm to start the GDS Manager.

Note: GDS Manager can be connected to a GDS Server on the same LAN or a cross the WAN, enter the Public or private IP of the GDS Server on the GDS Manager to connect.



GDS MANAGER APPLICATIONS

Basic Information

Administrator

The administrator sub-menu allows the admin to change its password and/or create new users.

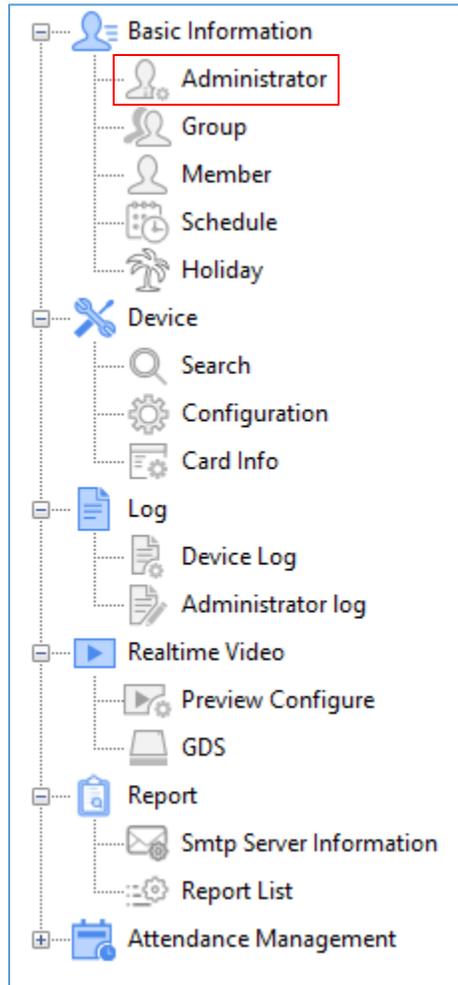


Figure 5: Administrator

Click on the “**Administrator**” icon to display the following window.

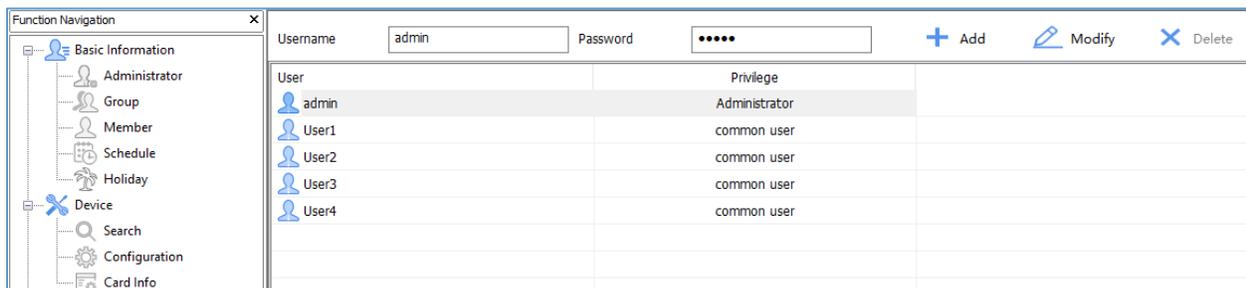


Figure 6: User Management



To change the admin password set the following:

- Enter a new password and click on  **Modify** .

To create a new user, follow below steps:

1. Enter a user name.
2. Enter a password.

3. Click on  **Add** .

Note: Administrator will have access to all sub-menus on the GDS Manager while user account will have access to the following.

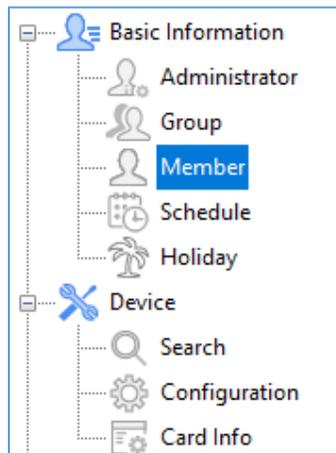


Figure 7: User Level Access

Group

Admin can create groups and sub-groups to separate users, this can be done by following those steps:

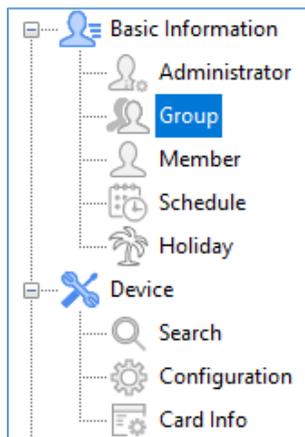


Figure 8: Groups



1. Click on “**Add**” as shown below.

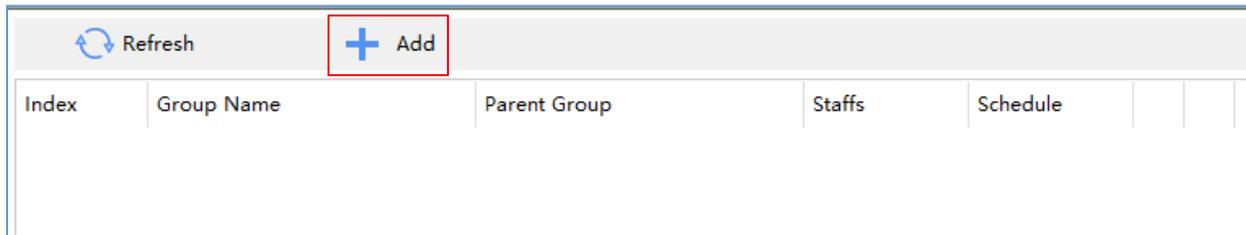


Figure 9: Add Groups

2. Enter the “**Group Name**” and “**Parent Group Name**” if parent group is needed.



Figure 10: Group Name

3. Configure the schedule time frames and click on “**Confirm**” to add the group.

Note: Users can create up to 50 groups.

Member

Admin can manage users from **Member** menu, he/she can add/delete/synchronize data with the GDS3710 and search for a user.

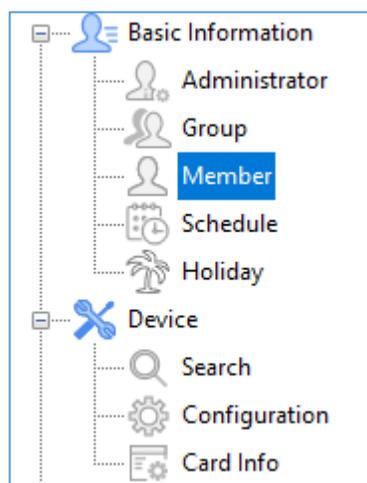


Figure 11: Member

1. Click on  to add a new user, the following window will pop up to enter user’s specific information.



Member Profile
✕

Personal Info

Index	<input type="text" value="0000001"/>	*	Name	<input type="text"/>
Gender	<input checked="" type="radio"/> Male <input type="radio"/> Female		ID Number	<input type="text"/>
Virtual Number	<input type="text"/>	*	CellPhone	<input type="text"/>
Sip Number	<input type="text"/>		Group	Disable ▾
Schedule	Disable ▾			
Remark	<input style="width: 100%;" type="text"/>			

Card Info

Card Number	<input type="text"/>	*	<input type="button" value="Start Read Card"/>
Card Type	ID Card ▾		
<input type="checkbox"/> Enable			
End Date	12/31/2099 <input type="text"/>		
Private Door Password	<input type="text"/>		
Confirmation	<input type="text"/>		


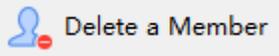
Figure 12: Member Profile

Table 1: Member Profile

Field	Description
Index	Filed automatically generated by the GDS Manager indicating the number of created users.
Name	Enter the user name.
Gender	Enter the user gender, Male or Female.
ID Number	ID number is a unique number to identify a user.
Virtual Number	When dialing directly from the keypad, the GDS accept only Virtual number to identify a user, once the Virtual number is typed followed by # key, the Sip Number will be dialed.
Cell Phone	Enter the cell phone number of the user.
SIP Number	The SIP Number is mapped with virtual number, once the virtual number is dialed the GDS3710 will send an INVITE to the SIP Number.
Group	Enter the group where the user belongs.
Schedule	Configures the schedule time frames which will be assigned to the users for door system usage
Remark	Enter some remarks regarding the current user.

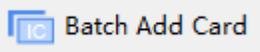

Card Number	Enter the RFID Card number (this is the number written on the RFID card).
Start Read Card	Click Start Read Card, then sweep RFID card on the USB card reader to read the number registered on the RFID card.
Card Type	Specifies the Card Type.
Clear Card Information	Click on this option to delete the card information.
Enable	Click on this filed to enable this user.
End Date	Enter date when the card will end being active.
Private Door Password	Enter the specific PIN code to unlock the door (Digits only)
Confirmation	Confirm the PIN code password

2. Select a user and click on  to delete the selected entry.
3. Click on , the following window will pop up.

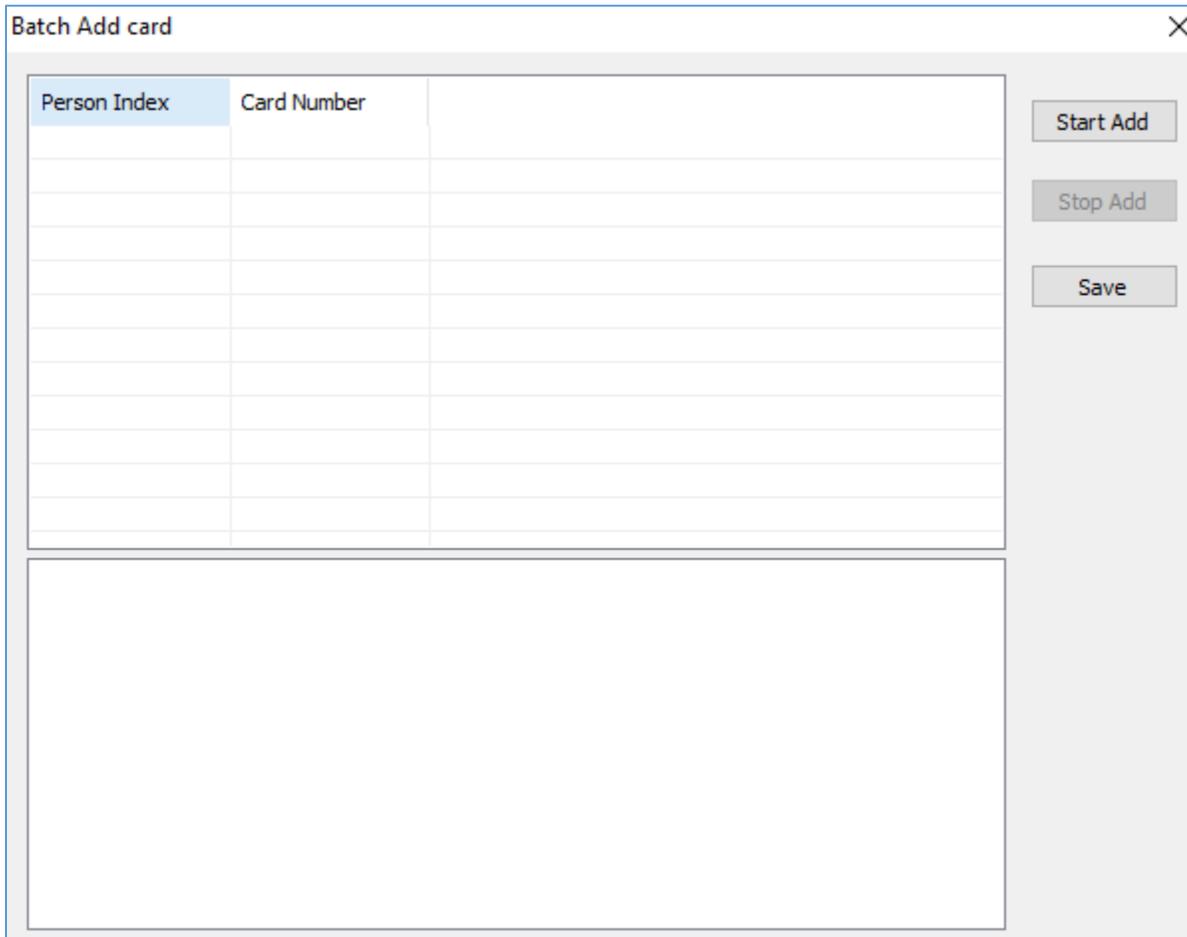
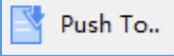
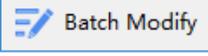


Figure 13: Batch Add Card

- a. Plug the USB Card Reader that can be purchased from Grandstream as shown below.



Figure 14: USB Card Reader

- b. Click on “Start Add”.
 - c. Start swiping RFID cards, and the (“Person Index”, “Card Number”) fields will be incremented.
 - d. Click on “Stop Add” once finished adding new cards.
 - e. Click on “Save” to save the added cards.
4. Select a record and click on  to copy the selected user to the GDS3710.
 5. Select a batch of users, which will have the same configuration, and then click on , the following window will pop up.

Batch Config ✕

Person Index	Name	Group Name	Enable	Valid Date	Schedule
00000001	Alberto Dirr...	Disable	Yes	2099/12/31	Disable
00000002	Jack Eddy	Disable	Yes	2099/12/31	Disable
00000003	Mike Willson	Disable	Yes	2099/12/31	Disable

Group Disable ▼
 Schedule Disable ▼
 Enable Yes ▼
 Valid Date 08/12/2017 ▼

Figure 15: Batch Config



- a. Check the “**Group**” checkbox and select the Group to apply to all users.
 - b. Check the “**Schedule**” checkbox and select the Schedule to apply to all users.
 - c. Check the “**Enable**” checkbox to enable the users.
 - d. Check the “**Valid Date**” checkbox to set a validity date for all users.
6. Select users whose configuration need to be saved, then click on , the following window will pop up.

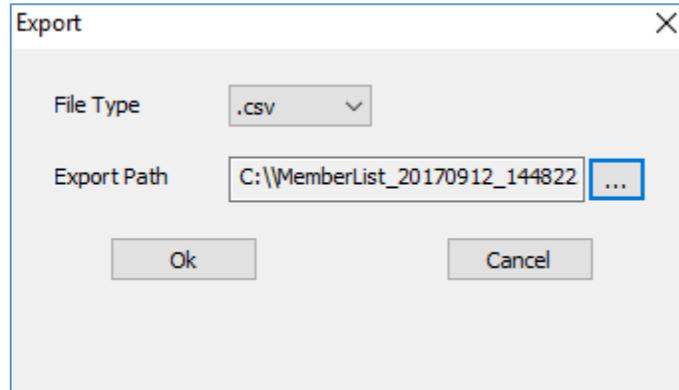


Figure 16: Export

- a. Click on , to browse directories where to store the users' data.
 - b. Click “OK” to save the data.
7. Users can search for members using the search bar to filter with different methods:
- Person Index
 - Name
 - Group Name
 - SIP Number
 - Card Number



Figure 17: Search Members

Schedule

Admin can schedule time frames which will be assigned to the users for door system usage, outside the configured time intervals, the GDS will deny users' access.

Click on  to edit the schedules or  for schedule details.



Index	Name	Holiday	Detailed Info
1	schedule_1	Disable	
2	schedule_2	Disable	
3	schedule_3	Disable	
4	schedule_4	Disable	
5	schedule_5	Disable	
6	schedule_6	Disable	
7	schedule_7	Disable	
8	schedule_8	Disable	
9	schedule_9	Disable	
10	schedule_10	Disable	

Figure 18: Schedule

Holiday

Admin can manage holidays which will be assigned to the users for door system usage.

Click on to edit the holidays or for holiday details.

Index	Name	Detailed Info
1	Holiday 1	
2	Holiday 2	
3	Holiday 3	
4	Holiday 4	
5	Holiday 5	
6	Holiday 6	
7	Holiday 7	
8	Holiday 8	
9	Holiday 9	
10	Holiday 10	

Figure 19: Holiday

Device

This sub menu allows users to search the available GDS3710 and prepare the configurations.

Search

Click on “Search” to perform a search for all GDS3710 available in the local network, the following window will be shown.



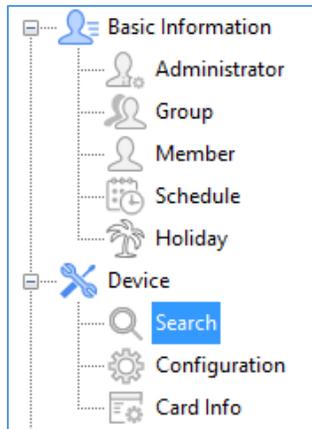


Figure 20: Search

<input checked="" type="checkbox"/> Search by server		Search		+ Add			
<input type="checkbox"/> Index	Model	Version	Device Name	IP	Web Port	RTSP Port	Mac
<input type="checkbox"/> 1	GDS3705	1.0.0.26	GDS3705	192.168.5.108	443		00:0B:82:9A:8C:A5
<input type="checkbox"/> 2	GDS3710	1.0.3.32	GDS3710	192.168.5.13	443	554	00:0B:82:A4:0D:95

Figure 21: Search Window

1. Click **“Search”** to search for available GDSs
2. Select a GDS3710 and click on **“Add”** to start configuring selected GDS3710 from GDS Manager.
3. Click **“Exit”** to quit the search window.

Configuration

Configuration menu allow users to add manually available GDS3710 devices on the network to the GDS Manager.

1. Click on **“Configuration”** and the following window will pop up.

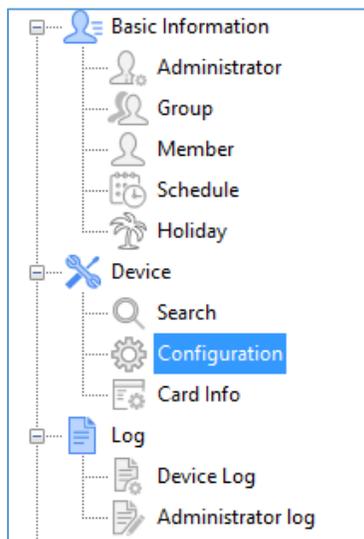


Figure 22: Configuration



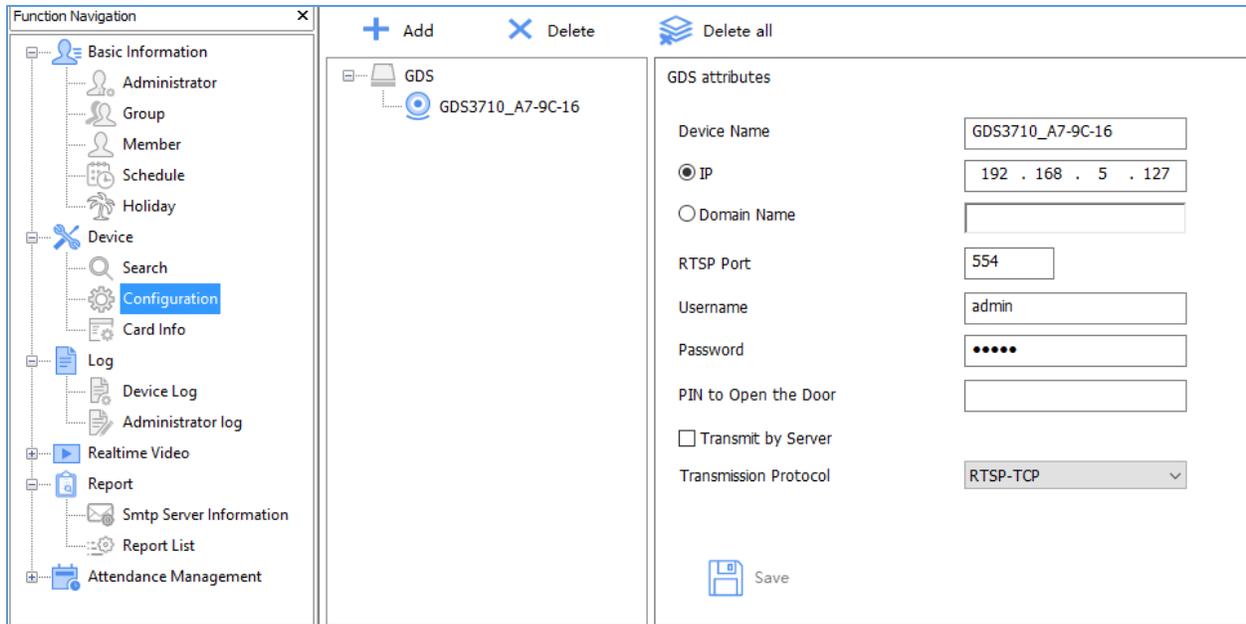


Figure 23: Device Config

2. Click on “Add” to add devices.
3. Enter the “Device Name”, “IP” or “Domain Name” and “User/pass” as well as the RTSP port.
4. Click “Ok” to add the new device.
5. Select a device and click on “Delete” to delete the selected device.
6. Click on “Delete all” to delete all the available devices.

Card Info

Click on “Card Info” to copy card information stored on the GDS3710 to the GDS Manager.

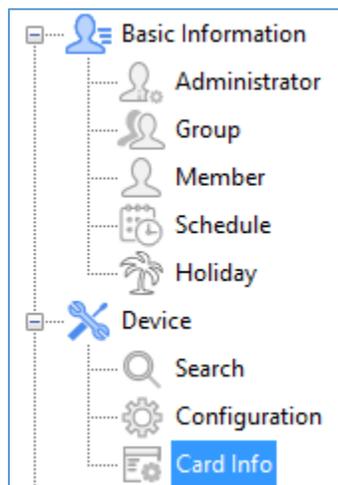


Figure 24: Card Info



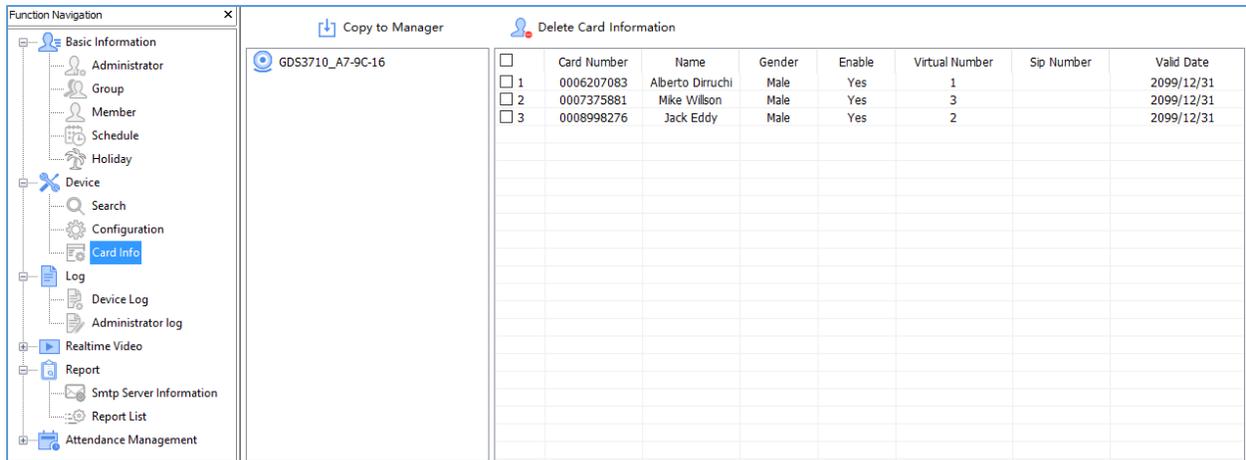


Figure 25: Device Card Information

1. Select User to be added to the GDS Manager, then click on “Copy to Manager”.
2. Select User to be deleted from the GDS3710, then click on “Delete Card Information”.
3. Click on “Exit” to quit the device card menu.

Log

This sub-menu provides access to GDS3710 and GDS Manager logs.

Device Log

Click on “Device Log” to retrieve logs of GDS3710 operations.

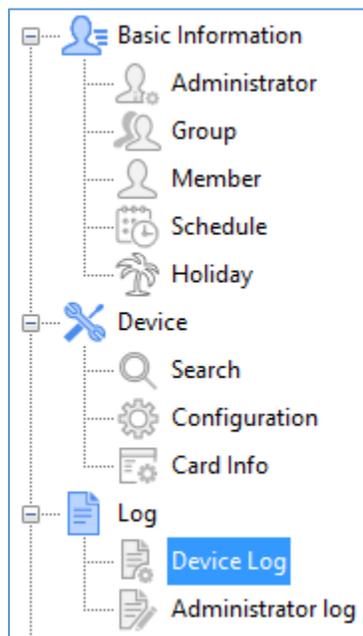


Figure 26: Device Log

The following window will be shown to filter logs.



Index	Device Name	Time	Operation Type	Name	Virtual Number	Sip Number
1	GDS3710_A7-9C-16	2018-05-24 10:33:24	System up			
2	GDS3710_A7-9C-16	2018-05-24 10:46:34	System up			
3	GDS3710_A7-9C-16	2018-05-24 10:57:42	Call In Log			192.168.5.111:5060
4	GDS3710_A7-9C-16	2018-05-24 11:06:13	Firmware Update(1.0.3.32)			
5	GDS3710_A7-9C-16	2018-05-24 11:06:13	Reboot			
6	GDS3710_A7-9C-16	2018-05-24 11:06:35	System up			
7	GDS3710_A7-9C-16	2018-05-24 11:22:17	Call Out Log			192.168.5.111:5060
8	GDS3710_A7-9C-16	2018-05-24 11:25:16	Reset(Retain Network Data and...			
9	GDS3710_A7-9C-16	2018-05-24 11:25:42	System up			
10	GDS3710_A7-9C-16	2018-05-24 11:28:25	Call Out Log			3002
11	GDS3710_A7-9C-16	2018-05-24 11:29:57	Open Door via Universal PIN			

Figure 27: Log Management Device

1. Filter can be done using 5 methods:

- **Device Name:** Select the device name from the drop-down list.
- **Operation Type:** 24 operations are available to filter with.
 - ❖ **All:** Display all available logs.
 - ❖ **Visiting Log:** Display logs related to visiting logs
 - ❖ **Open Door via Card:** Display logs related to opening door by RFID card.
 - ❖ **Open Door via PIN:** Display logs related to opening door by password.
 - ❖ **Open Door by DI:** Display logs related to opening door via digit input.
 - ❖ **Keep Door Open (Immediate):** Display logs related to the immediate keep door open.
 - ❖ **Keep Door Open (Scheduled):** Display logs related to the scheduled keep door open.
 - ❖ **HTTP API Open Door:** Display logs when opening the door using HTTP API.
 - ❖ **Call Log:** Display logs related to call logs.
 - ❖ **Motion Detection:** Display logs related to motion detection.
 - ❖ **Probed Alarm:** Display logs related to probe alarm.
 - ❖ **Dismantle by Force:** Display logs related to dismantle by force (GDS3710 will trigger alarms set on “Tamper alarm” when trying to remove GDS from the installation bracket).
 - ❖ **Hostage Alarm:** Display logs related to hostage alarm (GDS3710 will trigger alarms set on hostage alarm when users enter password on the GDS3710 keypad on an urgent situation).
 - ❖ **Invalid Password:** Display logs related to input error alarms (GDS3710 will trigger alarm actions every 5 failed attempts).
 - ❖ **Device Temperature:** Display logs related to device temperature
 - ❖ **System up:** Display logs related to device booting up
 - ❖ **Reboot:** Display logs related to device rebooting.
 - ❖ **Reset (Clear All Data):** Display logs related to full factory reset.



- ❖ **Reset (Retain Network Data Only):** Display logs related to unit factory reset except network data.
 - ❖ **Reset (Retain Only Card Information):** Display logs related to unit factory reset except card information.
 - ❖ **Reset (Retain Network Data and Card Information):** Display logs related to unit factory reset except network data and card information.
 - ❖ **Firmware Update:** Display logs related to firmware update
- **Virtual Number:** Enter the Virtual Number of the user to filter with.
 - **Card Number:** Enter the Card Number of the user to filter with.
 - **Period of time:** Select the period of time
2. Click “Search” to start searching for logs according to search criteria.
 3. Click on “Export” to export displayed logs.

Administrator Log

Click on “Administrator log” to retrieve logs of GDS Manager operations.

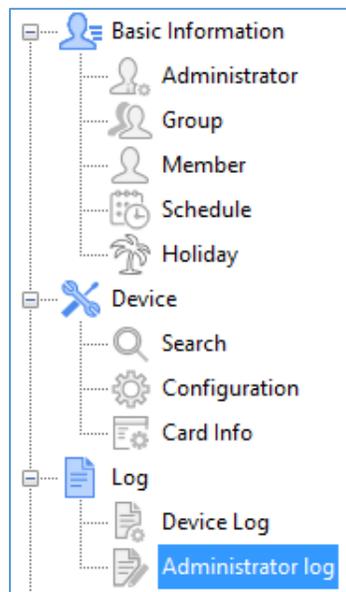


Figure 28: Administrator Log

The following window will be shown to search for GDS Manager logs.

Period of Time						Search
	5/24/2018	12:00:00 AM	-->	5/24/2018	11:59:59 PM	
Index	Date	Time	User	Operation Type	Detailed Info	
1	2018/5/24	09:45:41	admin	Login		
2	2018/5/24	10:17:43	admin	Edit staff group	Grandstream	
3	2018/5/24	10:17:56	admin	Edit staff group	Support	
4	2018/5/24	10:18:11	admin	Edit staff group	Documentation	
5	2018/5/24	10:18:17	admin	Edit staff group	Documentation	
6	2018/5/24	10:18:30	admin	Edit staff group	Management	
7	2018/5/24	10:22:31	admin	Added	Added Person Index "00000001"	
8	2018/5/24	10:23:35	admin	Added	Added Person Index "00000002"	
9	2018/5/24	10:25:23	admin	Edit	Edit Person Index "00000002"	

Figure 29: Log Management Admin

This window display information logs performed by the GDS Manager, such as login, adding/deleting cards, modifying users, adding/deleting devices...

Realtime Video

Click on "Realtime Video" to list available GDS3710 streams

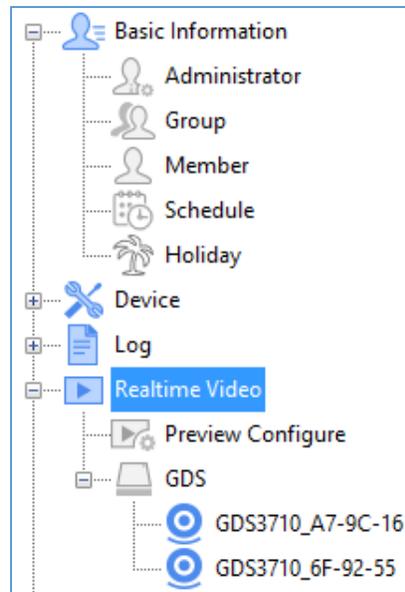


Figure 30: Realtime Video

Users need to add first GDS3710 to the GDS Manager from the "Search" sub menu to display stream on the "Realtime Video" menu.



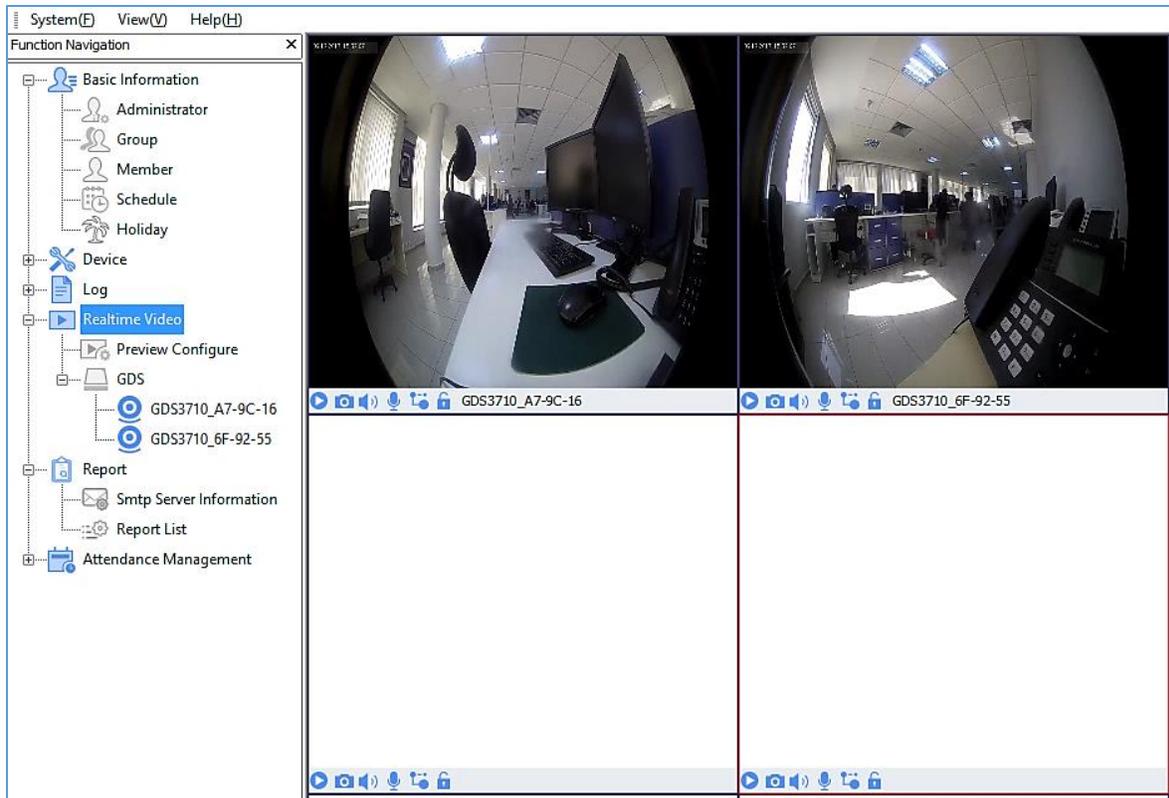


Figure 31: Play GDS3710 Stream

The following screenshot display the video stream of the connected GDS3710, users can start/stop the live stream, take a stream's capture, enable/disable the sound, enable two – way audio, choose the stream and open the door remotely using the following commands: .

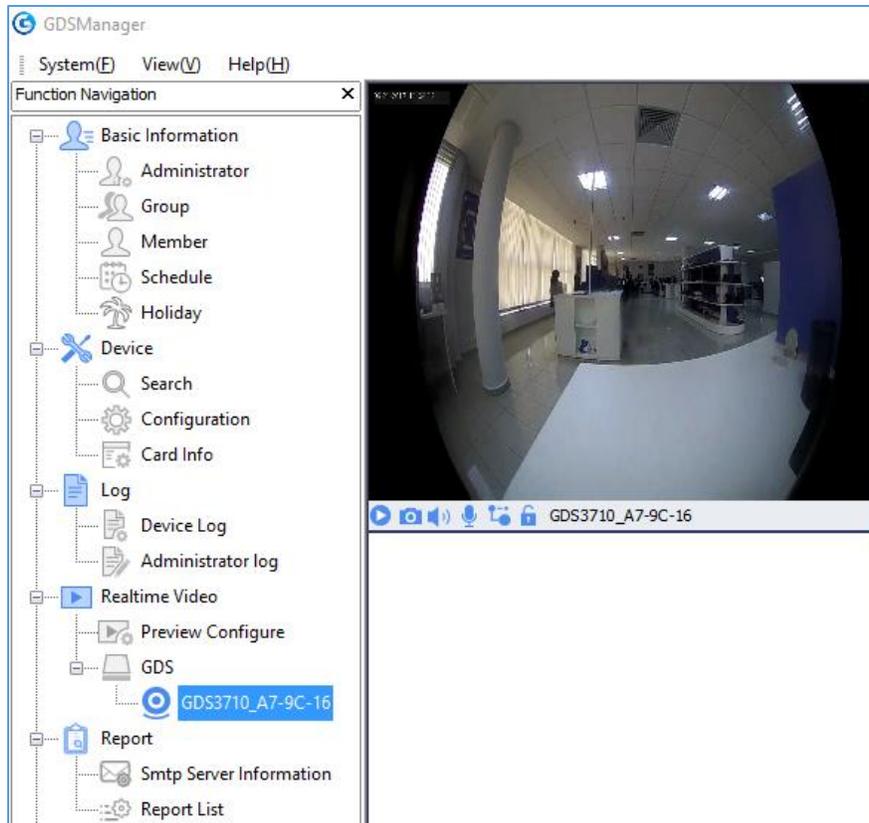


Figure 32: GDS3710 Live Stream

Note : A prompt message of “Open Door Successfully” will be displayed on the preview screen when door opened.

Preview Configure

Click on “Preview Configure” to select the file where to store screenshots taken from the GDS3710.



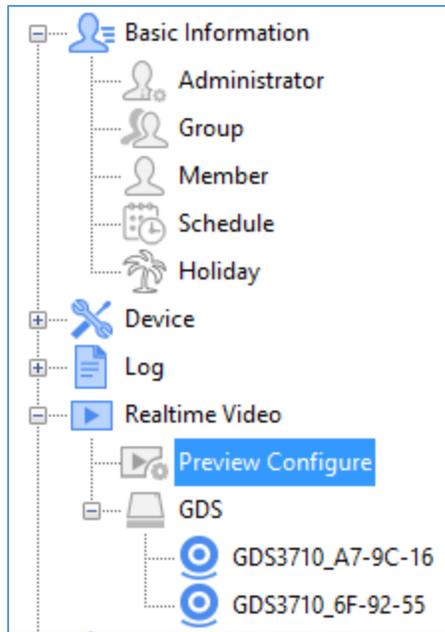


Figure 33: Preview Configure

The following window will pop up to select the directory where to store screenshots taken from the GDS3710.

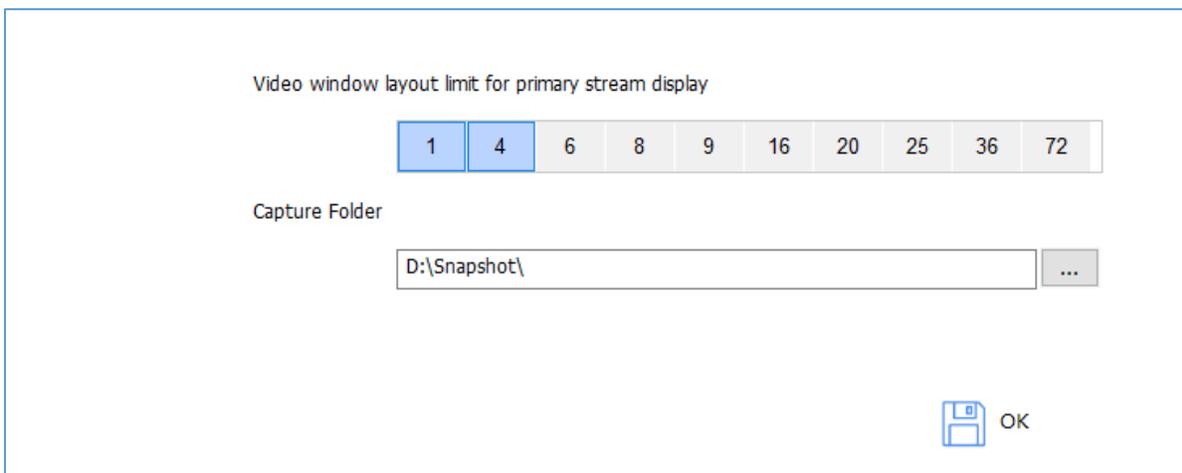


Figure 34: Local Config

GDS

The “GDS” sub-menu displays connected GDS3710 to the GDS Manager added via the “Search” sub menu and their video stream.



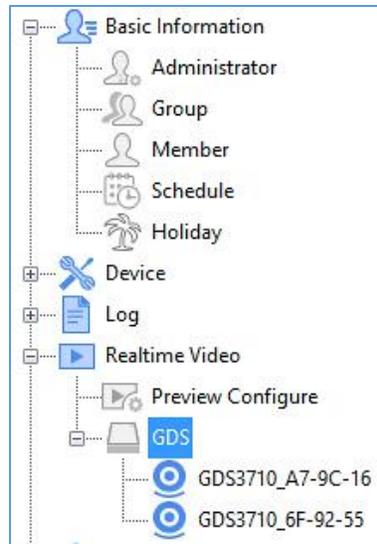


Figure 35: GDS

Report

This menu allows users to configure the SMTP server information and access to the report list.

SMTP Server Information

The SMTP server sub menu allows users to configure their SMTP server address, port, sender Emailbox and to send a test text.



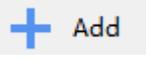
Server Address	<input type="text"/>
	<input checked="" type="checkbox"/> SSL
Port	<input type="text" value="465"/>
Sender Emailbox	<input type="text"/>
User Name	<input type="text"/>
Password	<input type="text"/>
Test Text	<input type="text" value="This is a test"/>
<input type="button" value="Send Test"/> <input type="button" value="OK"/>	


Figure 36: SMTP Configuration



Report List

The report list sub menu allows users to configure the report list including the report's name, email, subject, text, send period time, and report type.

Click on  to access the report list configuration as displayed on the following screenshot.

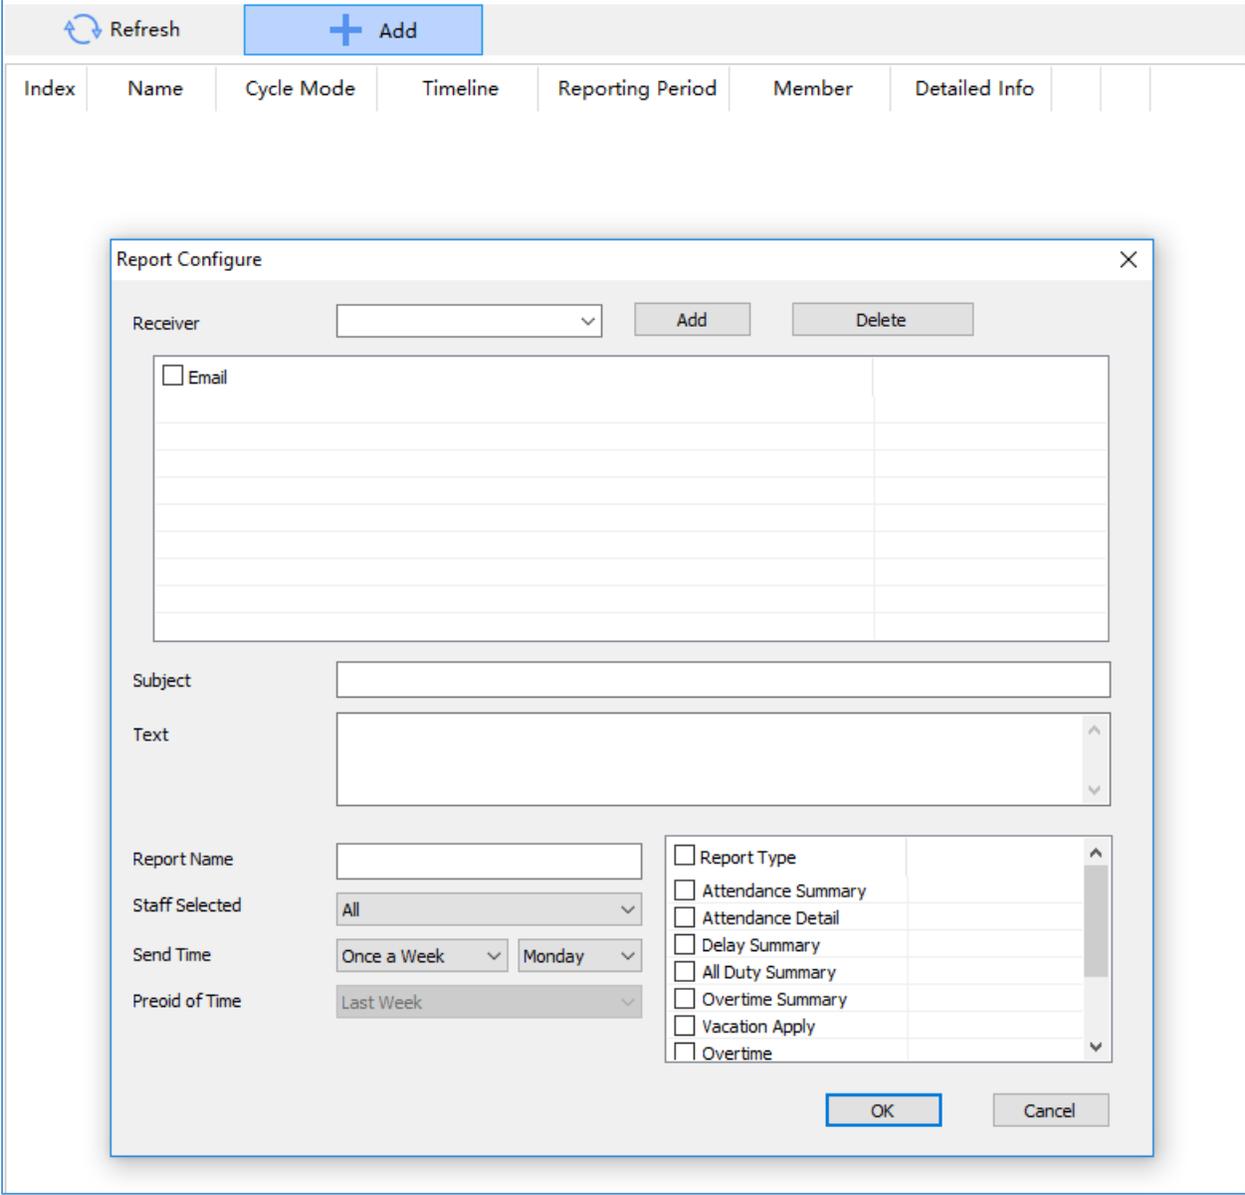

The screenshot shows a web interface with a table and a modal dialog box. The table has columns: Index, Name, Cycle Mode, Timeline, Reporting Period, Member, Detailed Info. The modal dialog is titled "Report Configure" and contains the following fields:

- Receiver: A dropdown menu with "Add" and "Delete" buttons.
- Email: A checkbox and a table with 5 rows and 2 columns.
- Subject: A text input field.
- Text: A text area with up/down arrows.
- Report Name: A text input field.
- Staff Selected: A dropdown menu with "All" selected.
- Send Time: A dropdown menu with "Once a Week" selected and a day dropdown with "Monday" selected.
- Preoid of Time: A dropdown menu with "Last Week" selected.
- Report Type: A list of checkboxes:
 - Report Type
 - Attendance Summary
 - Attendance Detail
 - Delay Summary
 - All Duty Summary
 - Overtime Summary
 - Vacation Apply
 - Overtime

Buttons for "OK" and "Cancel" are at the bottom right of the dialog.


Figure 37: Report List

Attendance Management

The "Attendance Management" sub menu display attendance records, as well as work shift, vacation, and time frame.



Time Frame

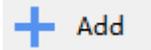Click on  under “Timeframe” in order to set start and end work time and other time property as shown below.

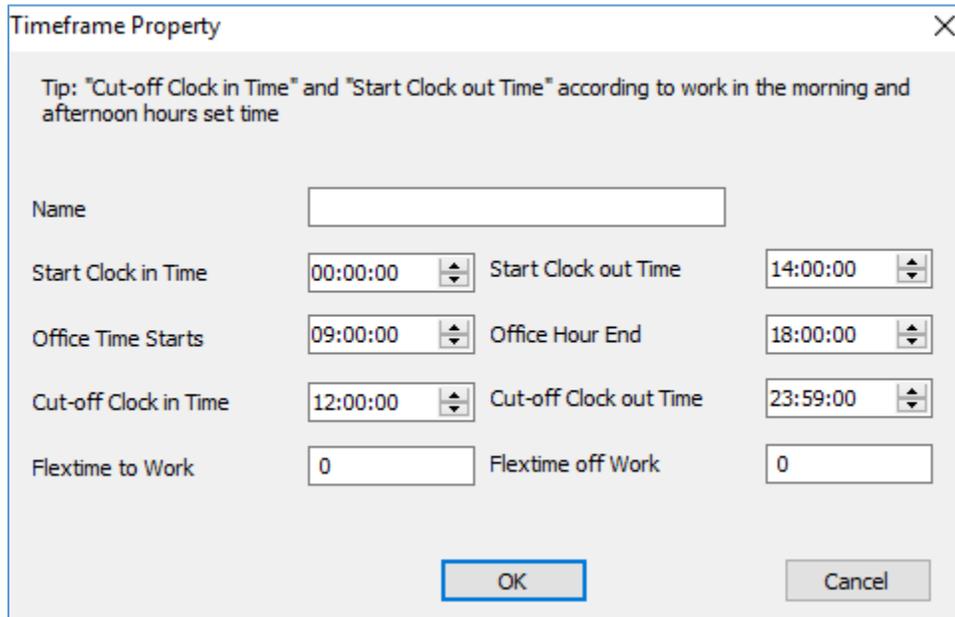


Figure 38: Timeframe Property

Table 2: Timeframe

Field	Description
Timeframe Name	Enter the Time Frame name.
Start Clock-in time	Enter time when users are allowed to start check-in.
Start Clock -out time	Enter time when users are allowed to start check-out.
Office Time Starts	Enter office start working time.
Office Hour End	Enter office end working time.
Cut-off-Clock-in Time	Enter end check-in time (no check-in will be accepted after this time).
Cut-off-Clock -out Time	Enter end check-out time (no check-out will be accepted after this time).
Flextime to Work	Enter allowed late time.
Flextime off Work	Enter allowed leaving early time.


Users can also modify or delete the timeframe by clicking on “Modified”, “Deleted” respectively.



Refresh		Add			
Index	Time Frame Name	Office hours	Office Hour End		
1	Frame 1	09:00:00	18:00:00		
2	Frame 2	08:00:00	18:00:00		

Figure 39: Timeframe

Work Shift

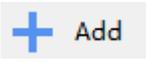Click on  under “Work Shift” to define work shift schedule to assign it to users. This can be done by completing the following information.

Work Shift Index ✕

Work Shift Name:

Cycle Type:

Select Timeframe

Frame 1(09:00:00-18:00:00)

Frame 2(08:00:00-18:00:00)

Select Date

Select All

Sunday

Monday

Tuesday

Wednesday

Thursday

Friday

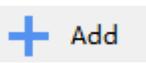
Saturday

Figure 40: Work Shift Index

Users need to:

1. Set a Work Shift Name.
2. Select a Cycle Type, either weekly or monthly.
3. Select a timeframe.
4. Select days of the shift.

Work Shift Assignment

Click on  under “Work Shift Assignment” to assign work shift to users as shown below.



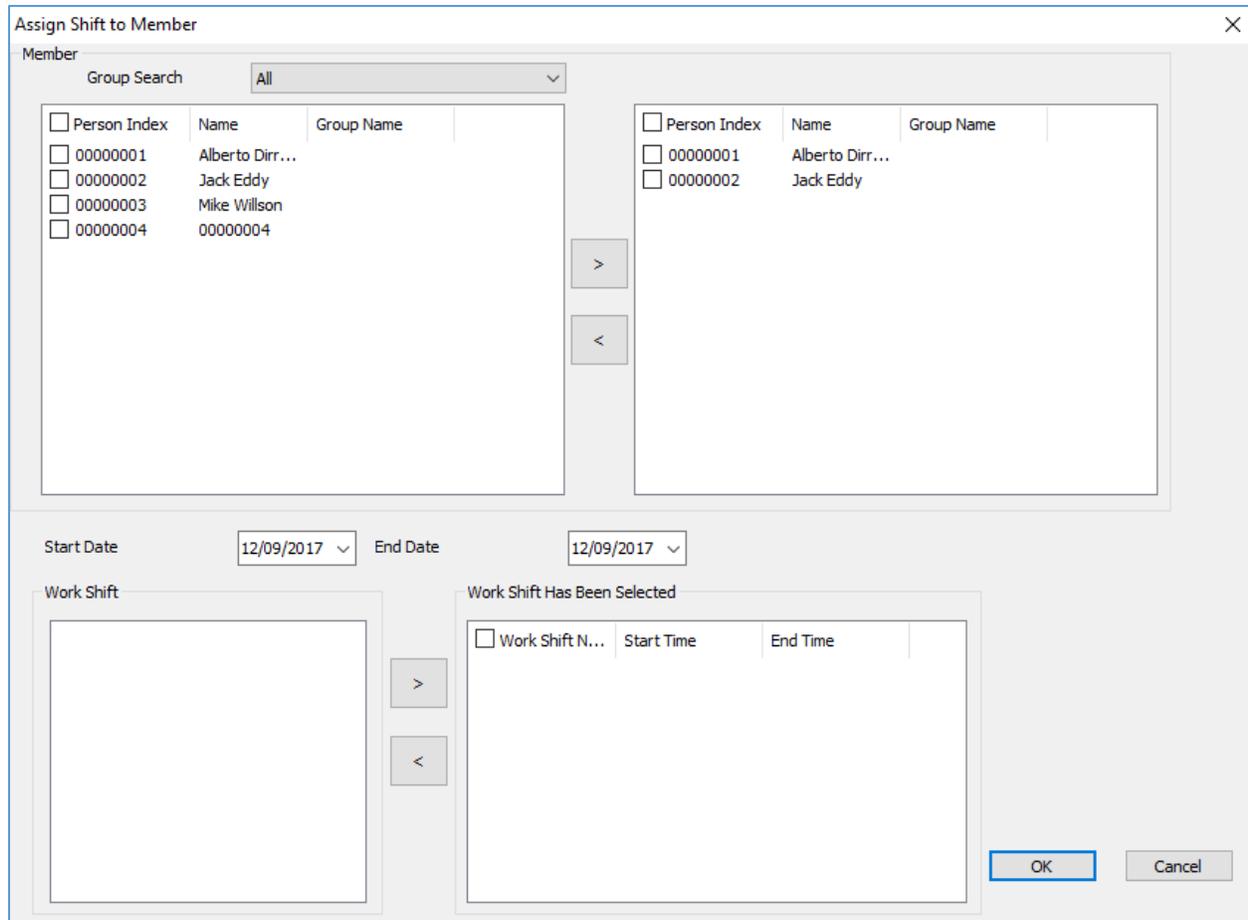



Figure 41: Assign Shift to Member

1. Select from “Member” users to include for a work shift using   arrows.
2. Select a “Start Date” and “End Date” for validity of the assignment configuration.
3. Select a work shift from the list and add it using  arrow.
4. Click “OK” to complete the selection.

Special Assignment

Click on  **Add** under “Special Assignment” to add a special assignment as shown below.



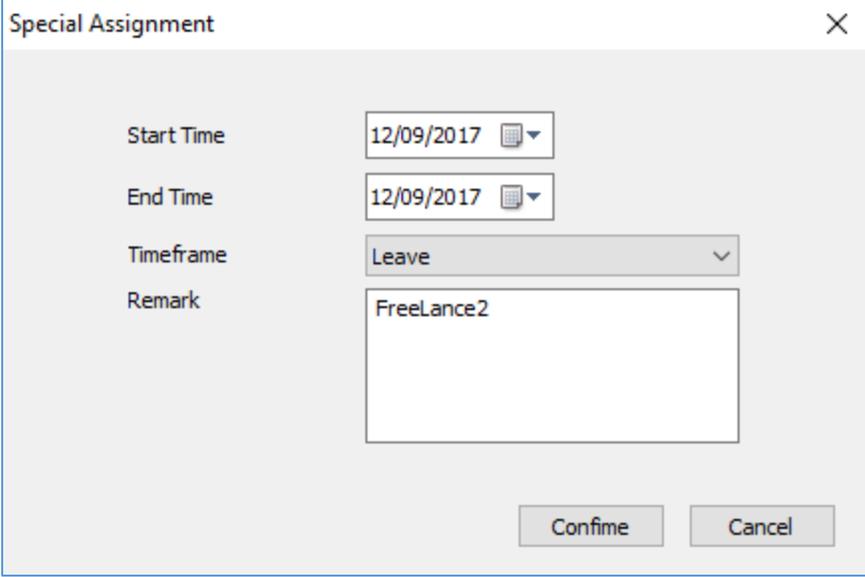

The 'Special Assignment' dialog box contains the following fields:

- Start Time:** 12/09/2017
- End Time:** 12/09/2017
- Timeframe:** Leave
- Remark:** FreeLance2

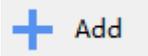
Buttons: Confime, Cancel


Figure 42: Special Assignment

Users need to set:

1. “Start Time” of the special assignment.
2. “End Time” of the special assignment.
3. Assign a specific “Timeframe” or set it to “Leave” to accept all periods.
4. Set a “Remark” as a reminder of the purpose if this special assignment.

Vacation Catalog

Click on  to add a new vacation type to assign it to users, the following window will pop up.

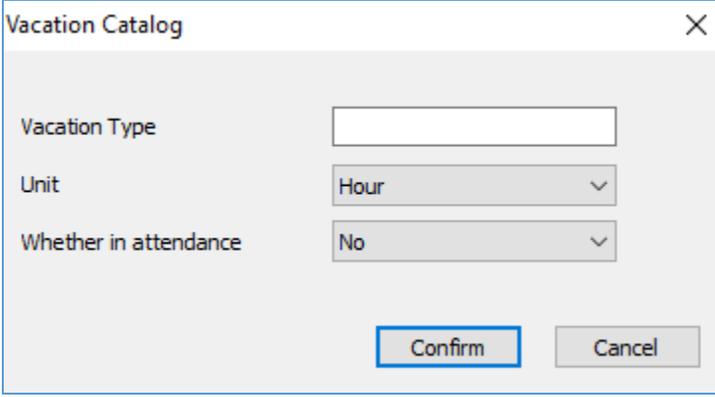

The 'Vacation Catalog' dialog box contains the following fields:

- Vacation Type:** (Empty text box)
- Unit:** Hour
- Whether in attendance:** No

Buttons: Confirm, Cancel


Figure 43: Vacation Type

Users need to set:

1. Enter a name on the “Vacation Type” to identify the vacation.
2. Select the unit of the vacation on “Unit”.
3. Set “Whether in attendance” to “Yes” or “No”.



Vacation Apply

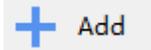Click on  to set configuration for vacation.

The following buttons allows users to delete, approve, revoke the vacations, export the vacation list or send an email:



Take Vacation
✕

Staff

Group Search: All

<input type="checkbox"/> Person Index	Name	Group Name
<input type="checkbox"/> 00000001	Alberto Dirr...	
<input checked="" type="checkbox"/> 00000002	Jack Eddy	
<input type="checkbox"/> 00000003	Mike Willson	
<input type="checkbox"/> 00000004	00000004	

>
<

<input type="checkbox"/> Person Index	Name	Group Name
<input type="checkbox"/> 00000002	Jack Eddy	

Start Time: 12/09/2017 00:00:00

End Time: 12/09/2017 23:59:59

Vacation Catalog: National Holiday

Remark: Holiday

Petition Date: 12/09/2017 17:27:56

Confirm
Cancel


Figure 44: Take Vacation


Following configuration needs to be done:

1. Select users for vacation using   arrows.
2. Enter the "Start Time" for vacation.
3. Enter the "End Time" for vacation.
4. Enter "Vacation Type".
5. Set a "Reason for Leave".
6. Enter the "Petition Date".



Overtime

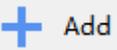Click on  to configure their users' overtimes, the overtime sub menu allows also to manage the overtime per users or periods.

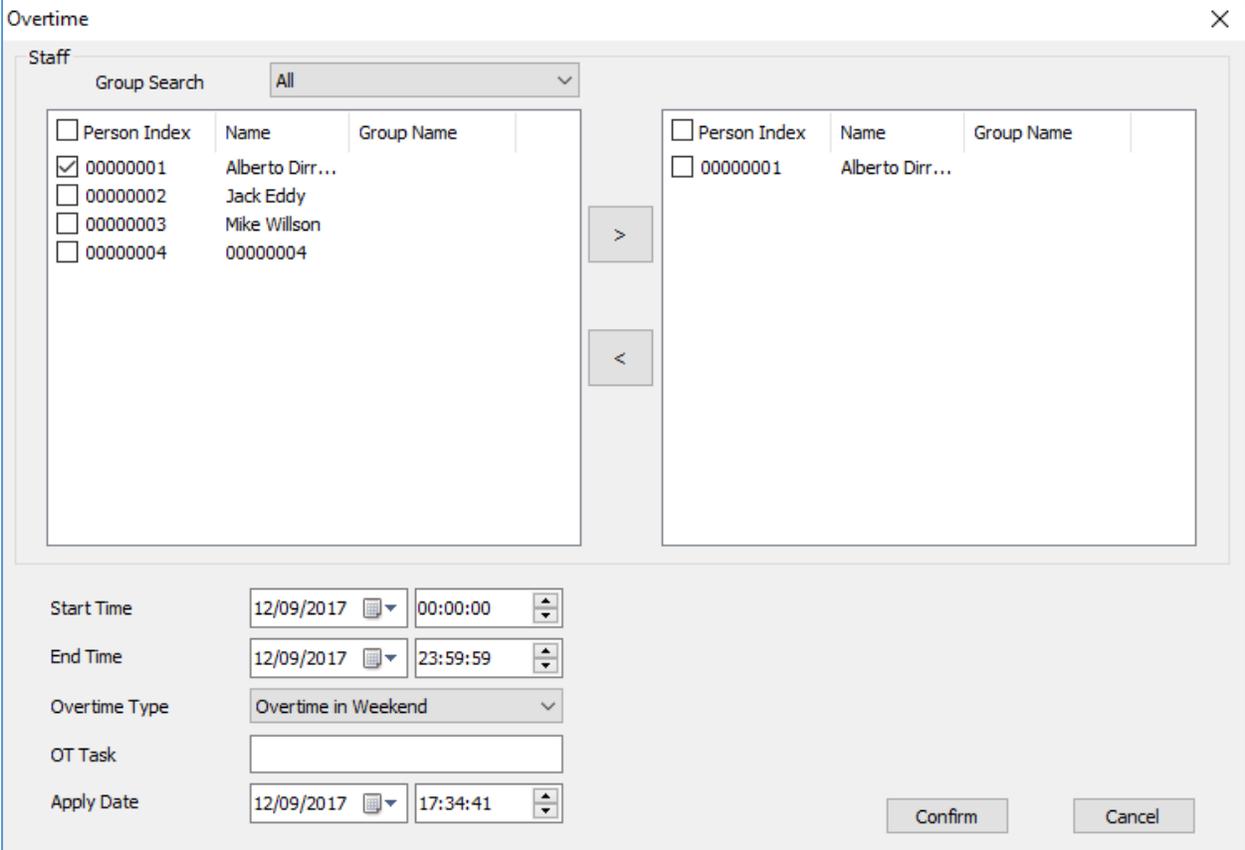

Overtime

Staff

Group Search: All

<input type="checkbox"/> Person Index	Name	Group Name
<input checked="" type="checkbox"/> 00000001	Alberto Dirr...	
<input type="checkbox"/> 00000002	Jack Eddy	
<input type="checkbox"/> 00000003	Mike Willson	
<input type="checkbox"/> 00000004	00000004	

<input type="checkbox"/> Person Index	Name	Group Name
<input type="checkbox"/> 00000001	Alberto Dirr...	

Start Time: 12/09/2017 00:00:00

End Time: 12/09/2017 23:59:59

Overtime Type: Overtime in Weekend

OT Task:


Apply Date: 12/09/2017 17:34:41

Confirm Cancel

Figure 45: Overtime

Clock in/out Records

The clock in/out sub-menu shows information about users, Name, Group Name, Date, Check-in and Check-out time, as shown below.

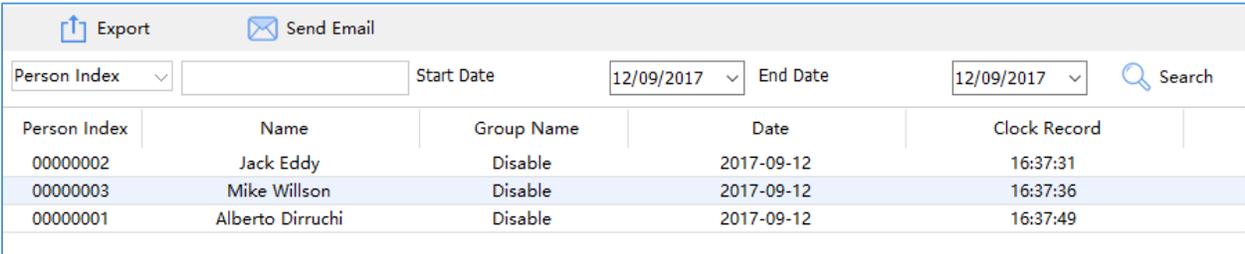

Export Send Email

Person Index: [] Start Date: 12/09/2017 End Date: 12/09/2017 Search

Person Index	Name	Group Name	Date	Clock Record
00000002	Jack Eddy	Disable	2017-09-12	16:37:31
00000003	Mike Willson	Disable	2017-09-12	16:37:36
00000001	Alberto Dirruchi	Disable	2017-09-12	16:37:49

Figure 46: Clock In / Out Records

Click on  Search to retrieve users' information from the GDS3710 (users may need to wait around 2 minutes for the GDS Manager to retrieve users' information from the GDS3710).



Click on  **Export** to export users' information to the specified path in ".csv" format as shown below.

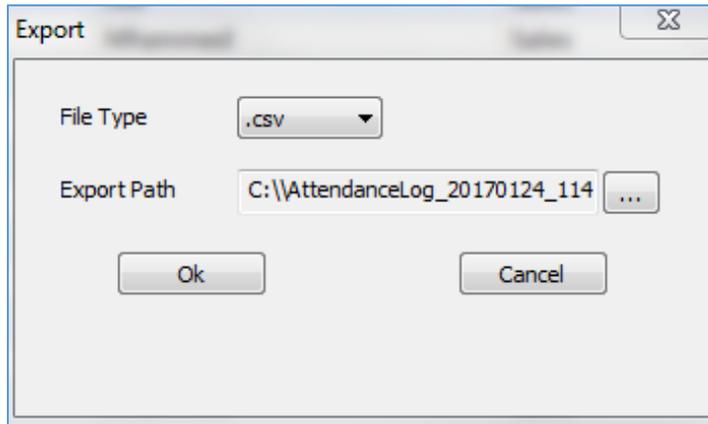


Figure 47: Export Attendance

Makeup Check-In

1. Click on  **Add** to add a new makeup record, the following window will pop up.

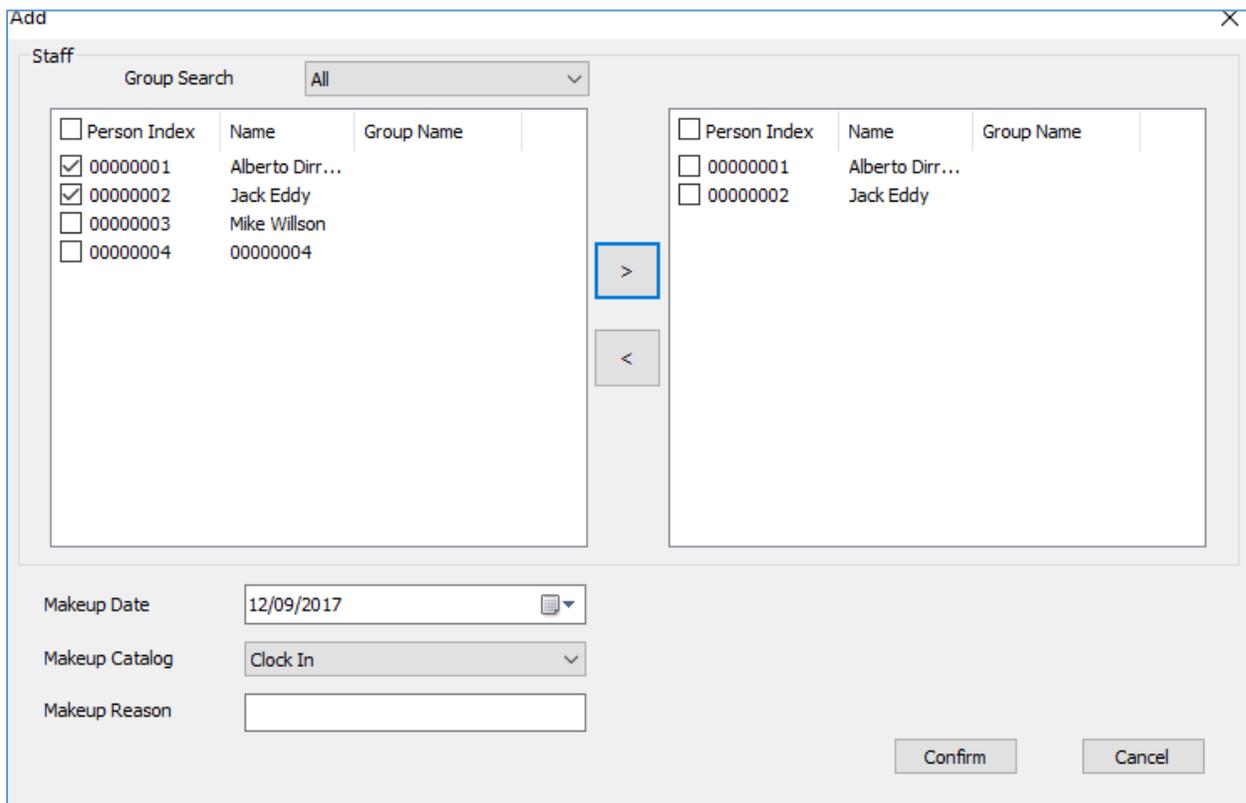


Figure 48: Makeup Record

2. Following steps need to be done:

- ❖ Select users for Makeup record using   arrows.



- ❖ Enter the “Makeup Date”.
- ❖ Enter the “Makeup Catalog”.
- ❖ Enter “Makeup Reason”.
- ❖ Click on “Confirm”.

3. Select a user and click on  to set the audit status for a user as pass or rejected, the following window will pop up.

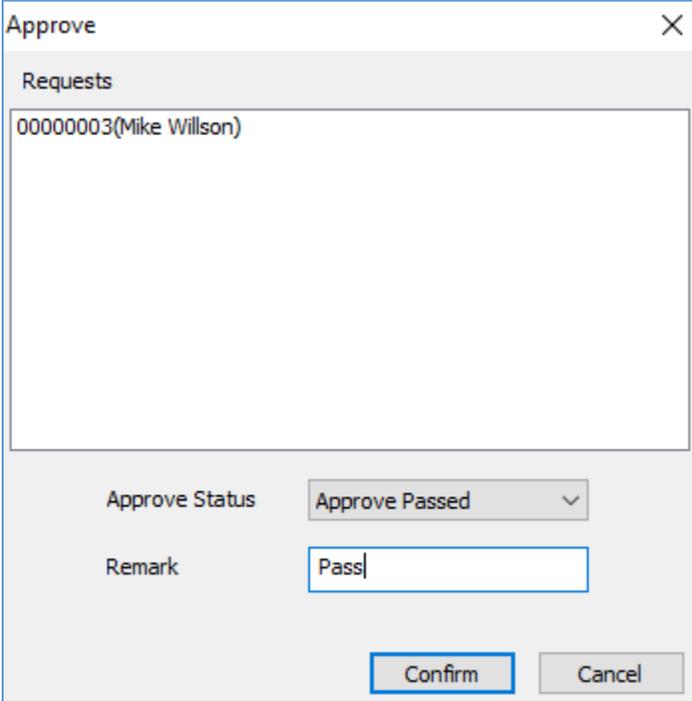
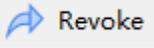
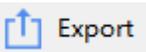


Figure 49: Audit

- ❖ Set the status of the audit either as “Audit Passed” or as “Audit Rejected”.
 - ❖ Set the audit reason.
4. Select a user, and then click on  to revoke the status.
 5. Select a user and click on  to delete it from the audit list.
 6. Select users and click on  to export the selected users in “csv” format.

Attendance Report

This sub menu provides an overview of attendance details, such as attendance summary, late summary, full attendance summary.

Users need to select the desired type of report from “Attendance Detail”, “Attendance Summary”, “Late summary”, “Full Attendance Summary”, then click on  Search to retrieve data from the GDS3710.



Name	Alberto Dirruchi;Jack Eddy;Mike Willson;00000004;				More		
Start Date	12/09/2017	End Date	12/09/2017	Search	Export	Send Email	
Attendance Detail Attendance Summary Delay Summary All Duty Summary Overtime Summary							
Person Index	Name	Group Name	Date	Check in time	Check out time	Sum of Delay(minutes)	Overtime(min)

Figure 50: Attendance Report

User can also click on  **Export** to export data on the specified path in a “csv” format.



EXPERIENCING THE GDS MANAGER

Please visit our website: <http://www.grandstream.com> to receive the most up-to-date updates on firmware releases, additional features, FAQs, documentation and news on new products.

We encourage you to browse our [product related documentation](#), [FAQ](#) and [User and Developer Forum](#) for answers to your general questions. If you have purchased our products through a Grandstream Certified Partner or Reseller, please contact them directly for immediate support.

Our technical support staff is trained and ready to answer all your questions. Contact a technical support member or [submit a trouble ticket online](#) to receive in-depth support.

Thank you again for purchasing Grandstream Door Phone System, it will be sure to bring convenience and color to both your business and personal life.

